

# LASER ADJUSTMENT GUIDE

AFTER TRANSIT YOU MAY NEED TO ADJUST THE **CROSS/SPOT SIZE**.

THE STEPS BELOW WILL SHOW YOU HOW.


FOR FURTHER DETAILS REFER TO THE MANUAL PROVIDED:

[WWW.FREEFORMFABRICATION.CO.UK/DADO-SUPPORT](http://WWW.FREEFORMFABRICATION.CO.UK/DADO-SUPPORT)

## CENTERING THE CROSS

### TO MOVE THE LASER SPOT:

1. Using the **Allen key** provided gently turn the screw clockwise or ACW to move the spot **up or down** (1)
2. To move the spot **left or right** turn the other screw clockwise or ACW (2)
3. Test the position by firing the laser, repeat the steps above to adjust when needed

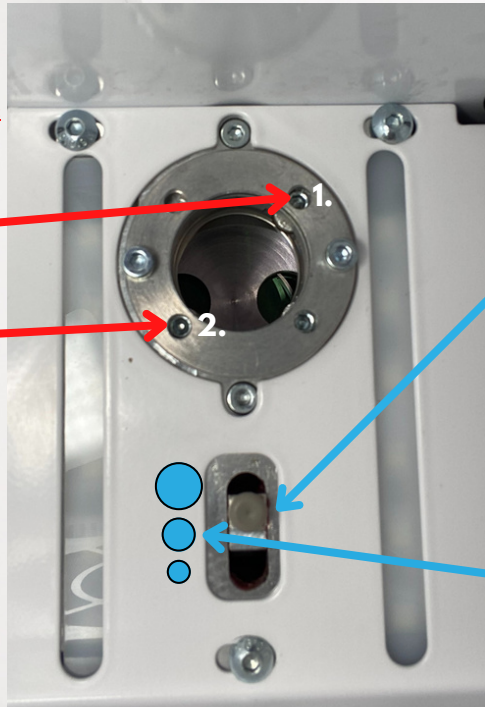

## ADJUSTING SPOT SIZE

**Push** the lever towards the chamber wall for the smallest spot size

**Pull** the lever towards you for the largest spot size

Representation of dot size (NOT TO SCALE)

FOR ASSISTANCE PLEASE CHECK OUR WEBSITE OR CONTACT US  
[MAIL@FREEFORMFABRICATION.CO.UK](mailto:MAIL@FREEFORMFABRICATION.CO.UK) OR PHONE [+44 \(0\)1438 900190](tel:+44201438900190)