


# Argon Gas

## HOW TO ATTACH YOUR ARGON GAS BOTTLE TO YOUR LASER WELDER

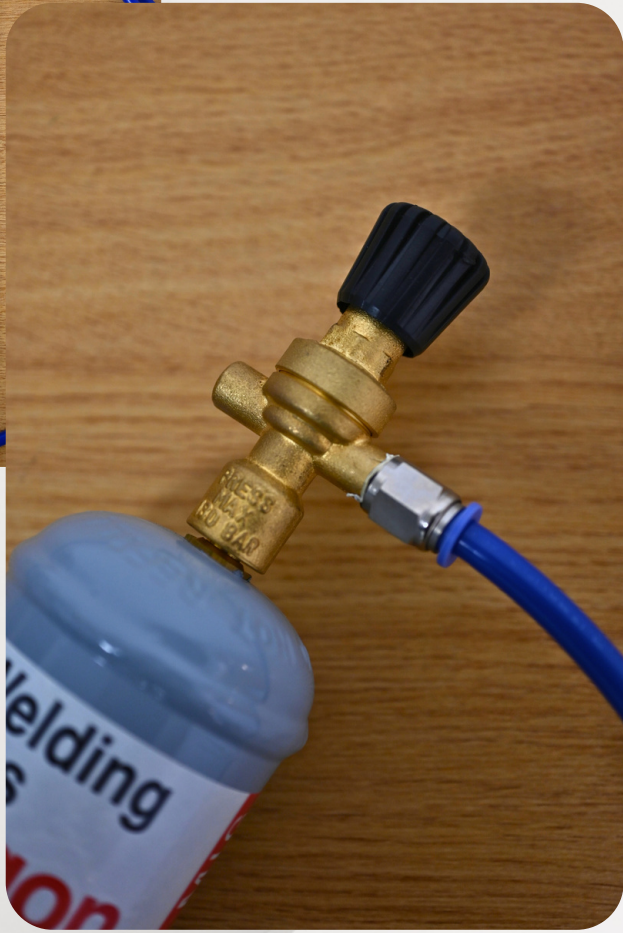

1

Assemble the regulator and pipe on to the argon bottle as shown in photos.

Find the connector for the pipe at the back of the laser welder and put the pipe into here, you should be able to pull on the pipe and there will be resistance



2

GAS


3

Open the valve on the regulator.



Add to the gas setting on the laser welder and move the pipe inside the laser to the working area.

4

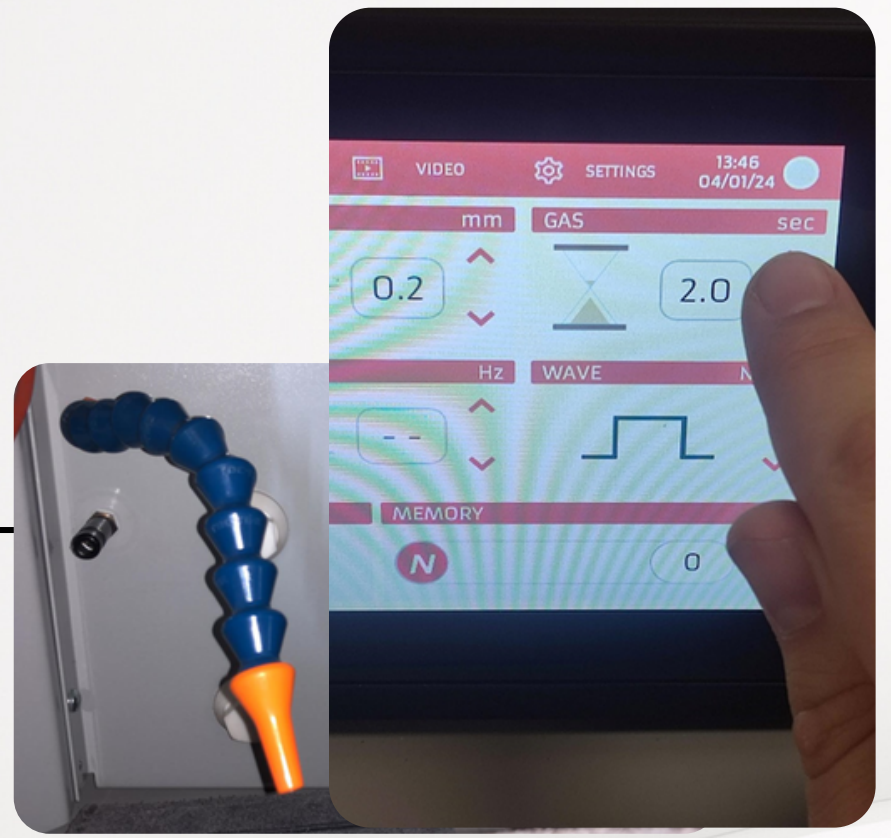

5

When you press the pedal to fire the laser you should hear gas enter the chamber then press the pedal again and the laser will fire. Each time you go to press the pedal it will release more gas first.

# Ready To Use

